



INDEX		OVERVIEW	
• OVERVIEW	P.1	AUTOMATIC MECHANICAL MOVEMENT	
• SCREW CROWN	P.2		
• SETTING THE TIME	P.4		
• SETTING THE DATE	P.6		
• SETTING THE DAY OF THE WEEK	P.8		
• WINDING THE MAINSPRING	P.10		
• WARRANTY	P.12		
• CARE PROCEDURES	P.20		
• WARRANTY CLAIM FORM	P.23		

SCREW CROWN

1. Make sure your watch is completely dry.
2. Turn the crown anti-clockwise (fig.1).
3. With crown completely unscrewed it can be pulled out to set your watch (fig.2).
4. Turn the crown clock-wise to wind the hands onto the correct time.
5. After setting push the crown back fully and carefully screw the crown back in slowly to reseal your watch. Never force the screw (fig.3).

IMPORTANT!
The crown must be fully screwed in for your watch to be water resistant. Never unscrew the crown when your watch is in water or wet.

SETTING THE TIME

1. Make sure your watch is completely dry.
2. Unscrew the crown (refer page 3).
3. Pull the crown out fully to "C" position.
4. Turn the crown to set hour and minute hands.
5. Push the crown back to "A" position.
6. Fully screw in crown (refer page 3).

SETTING THE DATE

1. Make sure your watch is completely dry.
2. Unscrew the crown (refer page 3).
3. Pull the crown out fully to "B" position.
4. Turn the crown anti-clockwise to set the date.
* If the date is set between the hours of around 9:00 PM and 4:00 AM, the date may not change on the following day.
5. After the date has been set, push the crown back to "A" position.
6. Fully screw in crown (refer page 3).

SETTING THE DAY OF THE WEEK

1. Make sure your watch is completely dry.
2. Unscrew the crown (refer page 3).
3. Pull the crown out fully to "B" position.
4. Turn the crown clockwise to set the day of the week.
* If the day of the week is set between the hours of around 9:00 PM and 4:00 AM, It may not change the following day.
5. After the day of the week has been set, push the crown back to "A" position.
6. Fully screw in crown (refer page 3).

WINDING THE MAINSPRING

This automatic winding watch can also be hand wound;

1. Make sure your watch is completely dry.
2. Unscrew the crown (refer page 3).
3. Hand wind by turning the crown in "A" position.
* Wind 15-20 times and it will start to move naturally after shaking slightly.
4. Fully screw in crown (refer page 3).

WARRANTY

This Backbone watch is covered by a 2 PART FAULT warranty. **Read carefully.** This warranty is void if the watch is opened by anyone other than the Backbone Watch Service Centre.

PART 1 - TWO (2) YEAR LIMITED WARRANTY
The movement of your watch is warranted by Backbone to the original purchaser to be free from defects in material and workmanship for the period expiring two (2) years from the date of original purchase.

Note: A movement is the part inside the watch that makes it work, but it does not include the crown, glass, band or case. Also not covered is damage caused by general wear and tear or any accidental damage.

During the above warranty period, if a fault occurs with respect to this Part 1, the watch will be repaired or replaced at Backbone's discretion and only upon proof of purchase (the original purchase receipt) with a same or similar Backbone model.

In such a case, please return the watch by receipted delivery (signature required) together with the completed warranty (refer page 23) and the original purchase receipt to:

Backbone Watch Service Centre
PO Box 1515
MILTON QLD 4064
Australia
Phone: 1300-BACKBONE (1300 222 526)
E: fixmywatch@backbonetime.com.au

PART 2 – TWO (2) YEARS ON WATER RESISTANCE FROM THE DATE OF PURCHASE

The water resistance of your watch is warranted by Backbone to the original purchaser for the period expiring two (2) years from the date of original purchase.

During the above warranty period, if a fault occurs with respect to this Part 2, the watch will be repaired or replaced at Backbone's discretion and only upon proof of purchase

(the original purchase receipt) with a same or similar Backbone model.

In such a case, please return the watch by receipted delivery (signature required) together with the completed warranty (refer page 23) and the original purchase receipt to the Backbone Watch Service Centre at the address specified earlier.

Backbone recommends that all watches be serviced, resealed and tested for water

resistance every 2 years as heat, salt and the elements will diminish water resistance over time. Have this done at the Backbone Watch Service Centre and Backbone will then issue a new warranty for another 2 years from the date of that service (on the condition that the watch is serviced within the preceding water resistance warranty period). Cost for the service and resealing will be given upon request.

GENERAL

Upon repair or replacement, Backbone will return the watch by receipted delivery to you, so make sure you send the completed warranty card with your full name and address clearly shown.

Remember all warranty claims must be accompanied with original purchase receipt clearly showing the date of purchase and such other information as listed above with respect to each Part of this warranty.

If applicable, all batteries of the watch are warranted for a full 1 year from the date of purchase.

Backbone is a registered trademark of Caseback International Pty Ltd. Backbone assumes no responsibility for any loss, or any claims by third parties that may arise through the use of this watch.

BACKBONE WATCH CARE PROCEDURES

- If applicable, do not operate buttons under water.
- If watch is exposed to salt water, rinse thoroughly in freshwater and wipe dry with a soft cloth.
- Do not clean watch with spray cleaners, thinners or such other volatile agents.
- Do not wear leather bands in water.

- Never try to open the watch.
- Avoid exposing your watch to extreme temperatures.
- Should moisture appear inside the watch, have it checked by Backbone technicians.
- Though Backbone watches are produced to high standards, avoid dropping the watch and rough treatment.

- Avoid exposing the watch to gasoline, cleaning solvents, aerosol sprays, paint, etc as chemical reactions with such agents will destroy seals, case and finish.
- Avoid magnetic fields as they may effect the time keeping of your watch.

WARRANTY CLAIM FORM

NOTE: For any warranty claim proof of purchase must be attached. ie) sales receipt or credit card statement clearly showing the date of purchase and any other information as more specifically required and detailed within each Part of this warranty.

Senders Name:

Return Address:

Contact Phone:

Fax no:

Email:

Brief description of fault: